



Note:

You can only use one Function at a Time: For example: If you want to shut down (Turn off) the NeoISlide 907 , hold down the Red Button until the Neoi turns off. Please note that if you are in the NAMES Mode, you must exit this Mode first, THEN turn off the Neoi.

Please Note that under Settings....Phone Set Up...Dedicated Key, you can program the Functions of the Joysticks for the UP, Down, Right and Left Function for easy access to your chosen Setting.



Note:

In order to enter your Pin on the NeoISlide 907, you must insert the Sim Card and Slide Open the Neoi.

Use the Keyboard to enter your Pin and then Press the Green Button for OK.



Please Note:

In order to unlock the Neoi, you can just Slide it open or in none Slide Mode, first Press the Red Key then the Green Key.

Please note that some Buttons have more then one function in Slide out Mode. Only one Function can be done at a Time.

To turn off the NeoISlide, please press the Red Button until the Unit turns off.